


SENCOR®

SWS 11

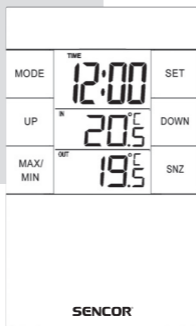

USER'S MANUAL

NÁVOD K OBSLUZE

NÁVOD NA OBSLUHU

FELHASZNÁLÓI KÉZIKÖNYV

INSTRUKCJA OBSŁUGI

Thermometer with wired sensor

Teploměr s drátovým čidlem

Teplomér s drátovým senzorum

Hőmérő vezetékes érzékelővel

Termometr z czujnikiem przewodowym

EN

CZ

SK

HU

PL

Functions:

- Display time
- Alarm & Snooze
- **Indoor temperature** (0°C to 50°C/ 32°F to 122°F)
- Outdoor temperature (-20°C to 70°C/ -4°F to 158°F)
- Accuracy : $\pm 1^{\circ}\text{C}$, 2°F
- Precision : 0.1°C , 0.1°F
- Power cord length: about 1,8 m
- Power: DC 3V
- Dimensions: 80 x 40 x 140 mm
- Weight:137 g

A. Battery: AAA x 2


Insert 2-AAA batteries into the battery compartment. When insert properly you will hear a "BIBIBI BIBIBIBI" sound. The clock is now ready to set.

The display should now be showing 0:00 TIME, and the indoor and outdoor temperature are displayed.

B. Time Setting:

- 1) Press **SET** key for 3 seconds to enter Time Setting Mode, then the **24hr** will be flashing, now press **UP** to select 12hr/24hr mode.
- 2) Press **SET** key again then the word is flashing then use **UP/DOWN** to set hour then press **SET** key confirm and enter the setting of minute. Press **UP/DOWN** to set minute, then press **SET** key to confirm the setting.



C. Alarm Setting:

- 1) At normal condition, press **MODE** key one time the "ALARM" will be shown on the display.
- 2) Hold **SET** key for 3 seconds the  displays to enter Alarm Setting Mode, then the word is flashing. Press **UP/DOWN** key to set hour then press **SET** key confirm and enter the setting of minute. Press **UP/DOWN** to set minute, press **MODE** key to confirm.
- 3) Press **MODE** key again to come back to the normal condition
- 4) Alarming, press any key to stop it.

D. Snooze Function:

- 1) When alarm is sounding, press the **SNZ** key to stop and enter into the snooze mode. Every 8 minutes later it will alarm again until the alarm is turned off.

E. Start or cancel the alarm setting

- 1) Press **SNZ** key steadily for 3 seconds to close the alarm, the  disappear. Press the **SNZ** key again to engage the alarm, the  will display again.

F. Temperature:

- 1) At normal condition, press **MAX/MIN** key to display max and min value of indoor & outdoor temperature, Press **SET** key to clear the records.
- 2) This product has Fahrenheit and Centigrade functions, press **DOWN** key to select Centigrade/Fahrenheit display mode.

G. Outdoor Temperature Cable

- 1) Place the outdoor sensor outside through a window or door opening. Be sure the cable is not cut or pinched when the window or door is closed. Use the adhesive strip on the sensor to attach to the door frame or window sill.
Note: the probe at the end of the cable is water resistant and it is not appropriate to submerge it under water.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.